
01M Air Compressor Installation

(all air compressor has already oil in it, you don't have to add it. **This compressor doesn't have oil gauge.**)

Procedure



1. Assemble the regulator to the compressor(turn it clockwise)

Air Compressor Installation

Procedure



2. Fixing the regulator as turning it clockwise.

(the black dial should be up as the picture.)




3. Connect air hose to the drain hole. 50cm ~ 100cm length of the air hose is recommended.

Air Compressor Installation

Procedure



4. Connect air hose to the regulator. Make sure it to be secure.

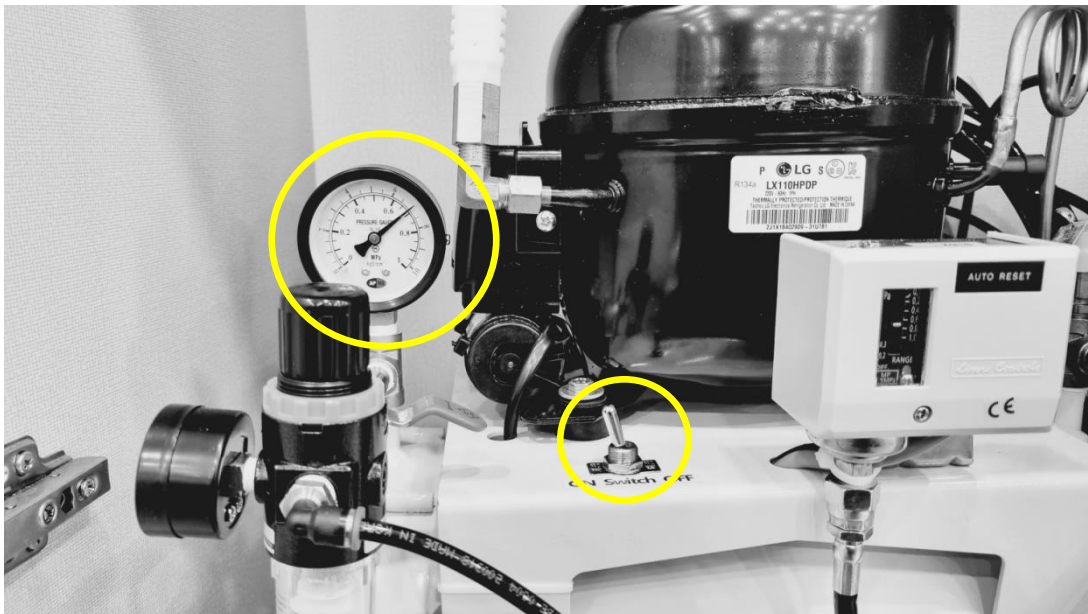


5. Turn on the compressor and check the pressure gauge.


(The proper pressure gauge will be set automatically.)

Air Compressor Installation

Procedure

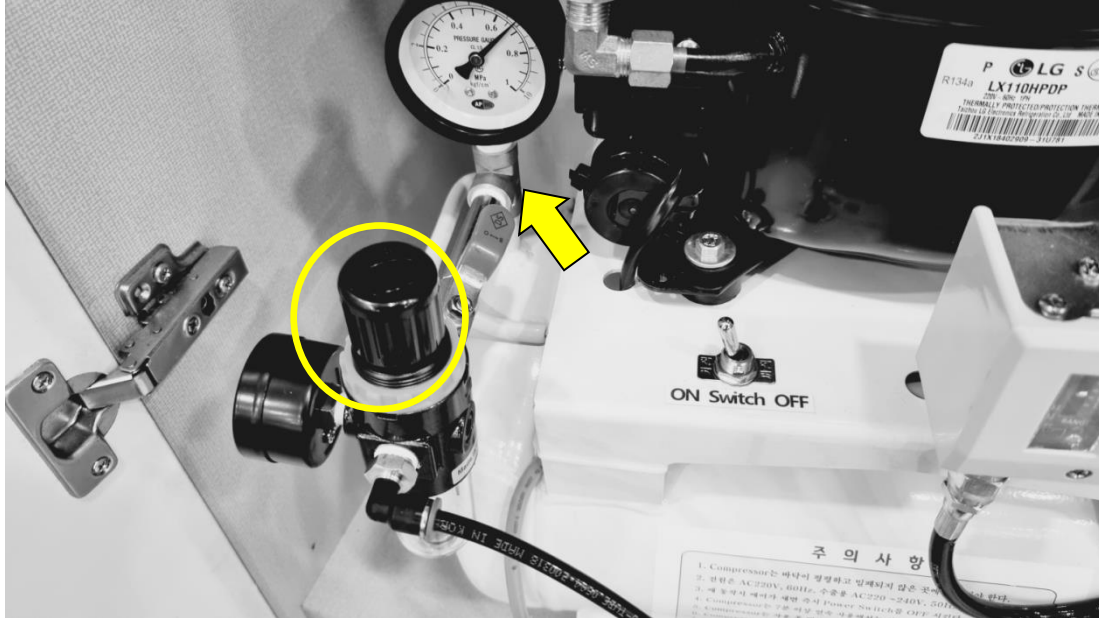

6. Release the lever first. Raise the black dial and turn it clockwise.

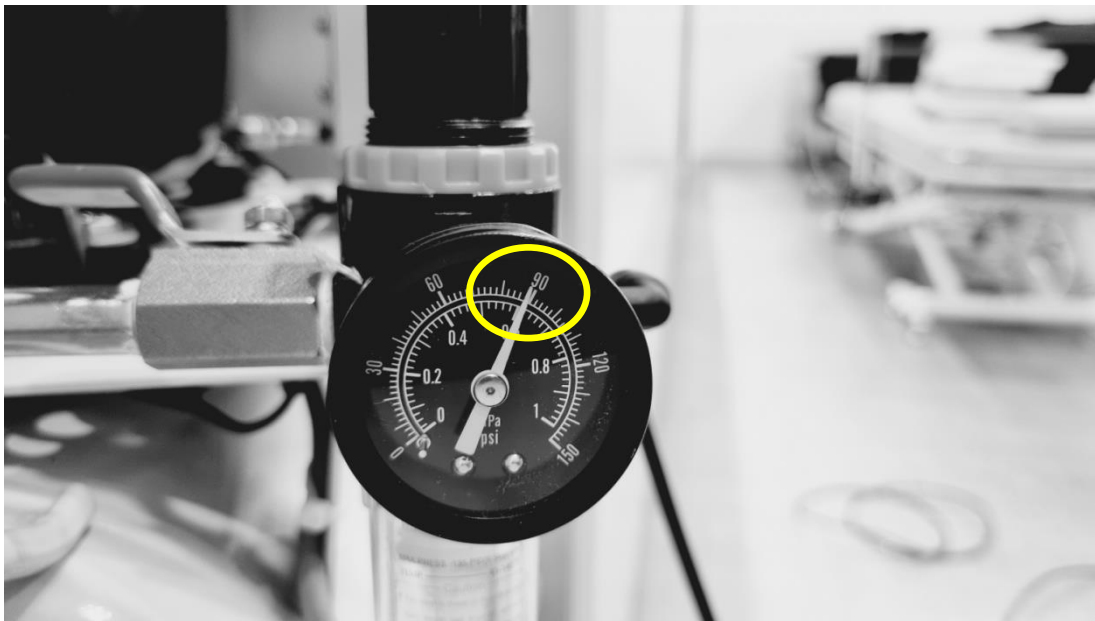

7. Check the regulator PSI until it doesn't go up.

(normally basic PSI is between 0.6 and 0.8.)